



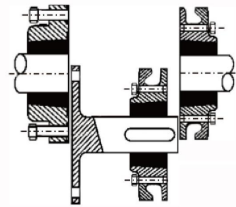

SM 加长联轴器 SM Spacer Couplings

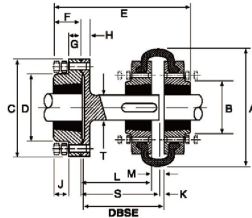

轴端间距离 (Distance Between Shaft Ends)

型号 Size	轴端之间的距离 (Distance Between Shaft Ends) (mm)																			
	SM12		SM16				SM25						SM30				SM35			
	80(100)		100		140		100		140		180		140		180		140		180	
	最小 Min	最大 Man	最小 Min	最大 Man	最小 Min	最大 Man	最小 Min	最大 Man	最小 Min	最大 Man	最小 Min	最大 Man	最小 Min	最大 Man	最小 Min	最大 Man	最小 Min	最大 Man	最小 Min	最大 Man
F40	80	100	100	113	140	150														
F50			100	116	140	156														
F60			100	124	140	164														
F70							100	114	140	154	180	194								
F80							100	117	140	157	180	197								
F90									140	158	180	198								
F100													140	158	180	198				
F110													140	156	180	196				
F120																	140	160	180	200
F140																	140	160	180	203

定位联轴器尺寸 (Spacer Coupling Dimensions)

定位器 Spacer	Num DBSE	联轴器 规格 Coupling Tyre	定位器 规格 Spacer Bush Size	最大孔径 Max Bore		锥套 规格 Bush Size	最大孔径 Max Bore		A	B	C	D	E	F	G	H	J	K	L	M	S	T
				mm	英寸		mm	英寸														
SM12	80	F40	1210	32	1.250	1008	25	1	104	82	118	83	134	25	14	15	14	6	65	22	77	25
SM12	100	F40	1210	32	1.250	1008	25	1	104	82	118	83	140	25	14	15	14	22	77	22	77	25
SM16	100	F50	1615	42	1.625	1210	32	1.250	133	79	127	80	160	38	18	15	14	9	85	25	94	32
SM16	140	F50	1615	42	1.625	1210	32	1.250	133	79	127	80	200	38	18	15	14	9	125	25	134	32
SM16	100	F60	1615	42	1.625	1610	42	1.625	165	103	127	80	161	38	18	15	14	9	78	33	94	32
SM16	140	F60	1615	42	1.625	1610	42	1.625	165	103	127	80	201	38	18	15	14	9	118	33	134	32
SM25	100	F70	2517	60	2.50	2012	50	2	187	80	178	123	180	45	22	16	14	9	80	23	94	48
SM25	140	F70	2517	60	2.50	2012	50	2	187	80	178	123	220	45	22	16	14	9	120	23	174	48
SM25	180	F70	2517	60	2.50	2012	50	2	187	80	178	123	260	45	22	16	14	9	160	23	174	48
SM25	100	F80	2517	60	2.50	2517	60	2.5	211	95	178	123	193	45	22	16	14	9	78	25	94	48
SM25	140	F80	2517	60	2.50	2517	60	2.50	211	95	178	123	233	45	22	16	14	9	118	25	134	48
SM25	180	F80	2517	60	2.50	2517	60	2.50	211	95	178	123	273	45	22	16	14	9	158	25	174	48
SM25	140	F90	2517	60	2.50	2517	60	2.50	235	108	178	123	233	45	22	16	14	9	116	27	134	48
SM25	180	F90	2517	60	2.50	2517	60	2.50	235	108	178	123	273	45	22	16	14	9	156	27	174	48
SM30	140	F100	3020	75	3	3020	75	3	254	120	216	146	245	51	29	20	17	9	116	27	134	60
SM30	180	F100	3020	75	3	3020	75	3	254	120	216	146	285	51	29	20	17	9	156	27	174	60
SM30	140	F110	3020	75	3	3020	75	3	279	134	216	146	245	51	29	20	17	9	118	25	134	60
SM30	180	F110	3020	75	3	3020	75	3	279	134	216	146	285	51	29	20	17	9	158	25	174	60
SM35	140	F120+	3525	100	4	3525	100	4	314	140	248	178	272	63	34	20	17	9	114	29	134	80
SM35	180	F120+	3525	100	4	3525	100	4	314	140	248	178	312	63	34	20	17	9	154	29	174	80
SM35	140	F140	3525	100	4	3525	100	4	359	178	248	178	271	63	34	20	17	9	111	32	134	80
SM35	180	F140	3525	100	4	3525	100	4	359	178	248	178	312	63	34	20	17	9	151	32	174	80

注: +必须用 "F" 法兰以适配延伸轴。"F" Flange must be used to fit the extension shaft.
DBSE-轴端之间的距离